

Avanti RemotesProgramming Guide





Programming Your Remote Control

- 1 Hinge Open your courtesy light to expose the "Learn" Button
- 2 Press the "Learn" button until the LED indicator grows solid. This is normally less than two seconds
- 3 Press and hold the desired remote button until the LED turns off, then let go
- 4 Press and hold the same button down on the remote again and the LED will rapidly flash
- 5 Wait for the LED to stop flashing, then test the operation of your new remote control

Clearing The Codes From Your Motor

- 1 Hinge Open your courtesy light to expose the "Learn" Button
- 2 Press the "Learn" button until the LED indicator grows solid. This is normally less than two seconds
- 3 Press and hold the black "Run" button until the LED begins to rapidly flash
- 4 Once the LED stops flashing, test to ensure your remotes no longer operate the motor