

## Switching Instructions

The green Auto Openers v2 remote can switch between two different modes of operation, being the Merlin C945 and Merlin M842 encryptions.

Once you have swapped over the remote to your required mode of operation, please follow the steps to program a remote to the opener as you normally would.



### Merlin C945 Security +

1. Press and hold Buttons 3 and 4 until the LED turns solid.
2. Release Button 4, do not let go of button Button 3.
3. Press Button 2 once. The LED will flash once.
4. Release Button 3. The remote is now set to Merlin Security+.
5. Following the instructions for the original remote, program the remote to the motor

### Merlin M842 FM

1. Press and hold Buttons 3 and 4 until the LED turns solid.
2. Release Button 4, do not let go of button Button 3..
3. Press Button 2 three times. The LED will flash twice.
4. Release Button 3. The remote is now set to Merlin M842.
5. Following the instructions for the original remote, program the remote to the motor